

datavideo[®]

7" TFT LCD Monitor

TLM-700HD



Instruction Manual

Rev 150310

www.datavideo-tek.com

Table of Contents

Warnings and Precautions.....	3
Warranty.....	5
Standard Warranty.....	5
Two Year Warranty.....	5
Disposal.....	6
Packing List.....	6
Introduction.....	6
Features.....	7
Supported Formats.....	7
Connections & Controls.....	8
Front Panel.....	8
Rear Panel.....	10
Menu Options.....	11
1. Picture.....	11
2. Audio.....	11
3. Func.....	11
4. Setup.....	12
5. Advance.....	13
Calibrating Datavideo Monitors.....	13
Specifications.....	14
Service & Support.....	15

Warnings and Precautions

1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord's rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.

11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked “Do Not Remove” may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power cord is damaged or frayed;
 - b. When liquid has spilled into the unit;
 - c. When the product has been exposed to rain or water;
 - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
 - e. When the product has been dropped or the cabinet has been damaged;
 - f. When the product exhibits a distinct change in performance, indicating a need for service.

Warranty


Standard Warranty

- Datavideo equipment is guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered by this warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- Cables & batteries are not covered under warranty.
- Warranty only valid within the country or region of purchase.
- Your statutory rights are not affected.

Two Year Warranty

- All Datavideo products purchased after 01-Oct.-2008 qualify for a free one year extension to the standard Warranty, providing the product is registered with Datavideo within 30 days of purchase. For information on how to register please visit www.datavideo-tek.com or contact your local Datavideo office or authorized Distributors
- Certain parts with limited lifetime expectancy such as LCD Panels, DVD Drives, Hard Drives are only covered for the first 10,000 hours, or 1 year (whichever comes first).
- Any second year warranty claims must be made to your local Datavideo office or one of its authorized Distributors before the extended warranty expires.

Disposal

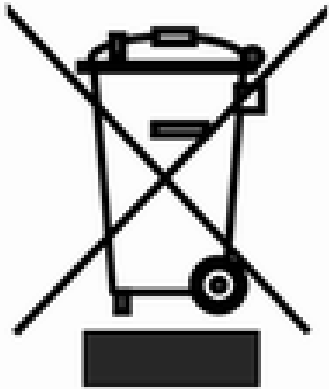

For EU Customers only - WEEE Marking

This symbol on the product indicates that it should not be treated as household waste. It must be handed over to the applicable take-back scheme for the recycling of waste electrical and electronic equipment. For more detailed information about the recycling of this product, please contact your local Datavideo office.

Packing List

Items	Description	Q'ty
1	TLM-700HD	1
2	Sunshield	1
3	Switching Adaptor DC 12V/1.5A	1
4	Instruction Manual	1

Introduction

The Datavideo TLM-700HD is a 7 Inch monitor designed for HD users who work outdoors in the field or in a studio. The TLM-700HD can be powered from a standard V-Mount battery connection or mains power. This enables you to power the monitor using an existing camera battery from a range of manufacturers. Its case design is both rugged and easy to carry with a variety of features and connections that make it perfect for set up tests and field or studio monitoring.

Features

- 7" 16:9 Wide Screen Panel
- Resolution: 800 x 480 dots
- View Angle (V)+60/-40°, (H)+60/-60°
- HD/SD-SDI, YUV, HD-YUV, HDMI & CV Input
- Internal colour bar
- Blue only function
- Audio indicator for SDI, HDMI
- Safe Area indicator
- VITC time code display
- Dual colour tally light indicator
- Brightness, Contrast, Colour, Tint Adjustable
- Colour Temp* adjustable
- Audio Level indicators
- NTSC / PAL Auto Switching
- 4:3 / 15:9 / 16:9 switchable

** can be set to 9300, 7500, 6500, 5400 or USER RGB values.*

Supported Formats

• HDMI YUV

- 720 x 576i x 50 Hz
- 720 x 480i x 60 Hz
- 1280 x 720p x 50 Hz
- 1280 x 720p x 60 Hz
- 1920 x 1080i x 50 Hz
- 1920 x 1080i x 60 Hz

• SDI

- 720 x 576i / 50 Hz
- 720 x 480i / 60 Hz
- 1280 x 720p / 60 Hz
- 1280 x 720p / 50 Hz
- 1920 x 1080i / 50 Hz
- 1920 x 1080i / 60 Hz

• CV

- 720 x 576i (PAL)
- 720 x 480i (NTSC)

• HDMI RGB


- 720 x 576i x 50 Hz
- 720 x 480i x 60 Hz
- 1280 x 720p x 50 Hz
- 1280 x 720p x 60 Hz
- 1920 x 1080i x 50 Hz
- 1920 x 1080i x 60 Hz

• YUV

- 720 x 576i x 50 Hz
- 720 x 480i x 60 Hz
- 1280 x 720p x 50 Hz
- 1280 x 720p x 60 Hz
- 1920 x 1080i x 50 Hz
- 1920 x 1080i x 60 Hz

Connections & Controls

Front Panel



Power Switch

Switches the power On / Off.



Stereo Headphone Mini Jack socket

The level is adjusted by headphone volume control. Listen to embedded audio from HDMI or SDI sources.



Headphone Volume Control

Allow you to adjust the headphone volume.




Source Button

Select Input source between SDI, YPbPr, CVBS, and HDMI.



Aspect Ratio Button

Sets the LCD aspect ratio to 4.3, 15:9, or 16:9



PATTERN

The PATTERN button will generate colour bars on the screen. Press the PATTERN button again to return normal

output.



BLUE

Press this button to eliminate the red and green component of input signals. Only the blue component of an input is displayed on the screen. This allows adjustments of chroma and phase.

(Phase adjustment is effective with NTSC signals).



MENU

Calls up the on-screen adjustment menu (See **Menu Options** for more details).



UP / DOWN

Navigate the on-screen menu and set the functions & levels.



ENTER

Confirms the new settings or return to the default state.

Rear Panel



HD/SD - SDI input
BNC connector for SDI Input.



YUV input
BNC connectors for analogue (Component) video inputs.



Composite video input
BNC connectors for analog (Composite) video inputs.



HDMI in interface
HDMI digital signal input connector.
Supports HDMI 1.1



Tally In
Send in red and yellow colour tally signal to tally LED. Red means on-air, yellow means standby.



DC in socket
Connect the supplied 12V 1.5A PSU to this socket. The connection can be secured by screwing the outer fastening ring of the DC In plug to the socket.

Menu Options

1. Picture

- Press the **MENU** button once to display the **Picture** setting menu.
- Press the **ENTER** button to highlight the **Brightness** setting.
- Press the **UP** or **DOWN** button to highlight the setting that needs to be adjusted.
- Press **ENTER** button to select the **Brightness** setting.
- Press the **UP** or **DOWN** button to adjust the **Brightness** value between 0 and 100.
- Press **ENTER** button again to save and return to the **Picture** setting menu; now highlight another Picture setting to be adjusted. To select a different setting (**Contrast, Saturation, Tint, Color Temp***) use the **UP** / **DOWN** buttons. Follow the same procedure to set the other values.
- Keep pressing the **MENU** button to cycle through the main menu options.
- Press the **SOURCE** button to exit the menu mode.

* **NB: Color Temp** can be set to 9300, 7500, 6500, 5400 or USER RGB values.

2. Audio

- Press the **MENU** button twice to display the **Audio** setting menu.
- Press the **ENTER** button to highlight the **Indicator** setting.
- Press the **ENTER** button again to toggle the on screen audio indicator **ON/OFF**.
- Keep pressing the **MENU** button to cycle through the main menu options.
- Press the **SOURCE** button to exit the menu mode.

3. Function.

- Press the **MENU** button three times to display the **Function**. Settings menu.
- Press the **ENTER** button to highlight the **Center Mark** setting.
- Press the **ENTER** button to toggle the on screen Center Mark **ON/OFF**.
- Press the **UP** or **DOWN** button to highlight the **Safety Zone** setting.
- Keep pressing the **ENTER** button to cycle through the values **80%, 90%** or **OFF**.
- Press the **UP** or **DOWN** button to exit the **Safety Zone** setting. To select a different setting (**4:3 Screen, Cinema Zone**) use the **UP** or **DOWN** buttons. Follow the same procedure to set the next setting.
- Keep pressing the **MENU** button to cycle through the main menu options.
- Press the **SOURCE** button to exit the menu mode.

4. Setup

- Press the **MENU** button four times to display the **Setup** setting menu.
- Press the **ENTER** button to highlight the **OSD Timer** setting.
 - NB:** *OSD Timer sets how long the setting menus will stay on screen.*
- Press the **ENTER** button again to display the **OSD Timer** setting position.
- Press the **UP** or **DOWN** button to set the OSD value between 5 to 60 SEC.
- Press **ENTER** button to save the OSD value.

- Press the **UP** or **DOWN** button to highlight the **OSD Blending** setting.
 - NB:** *OSD Blending sets how transparent the setting menus will be on screen.*
- Press the **ENTER** button to display the **OSD Blending** setting position.
- Press the **UP** or **DOWN** button to select the OSD blending value (from 0~7).
 - NB:** *OSD Blending value 0 = Min transparency 7 = Max transparency*
- Press the **ENTER** button to save the OSD blending value.

- Press the **UP** or **DOWN** button to highlight the **Time Code** setting.
- Press the **ENTER** button to toggle the on screen Time Code display **ON/OFF**.

- Press the **UP** or **DOWN** button to highlight the **TC Position** setting.
 - NB:** *TC Position is used to set where on the monitor Time Code will be shown.*
- Press the **ENTER** button to cycle through the possible Time Code Positions on the monitor (Left/Up, Middle/Down, Right/Down, Right/Up)

- Press the **UP** or **DOWN** button to highlight the **TC HD Line** setting.
- Press **ENTER** button to cycle through the possible HD time code lines (8~20).

- Press the **UP** or **DOWN** button to highlight the **TC SD Line** setting.
- Press **ENTER** button to cycle through the possible SD time code lines (10~21).

- Press the **UP** or **DOWN** button to highlight the **TC Font Size** setting.
- Press **ENTER** button to cycle through the possible time code font sizes on the screen (Large or Small).

- Keep pressing the **MENU** button to cycle through the main menu options.
- Press the **SOURCE** button to exit the menu mode.

5. Advance

- Press the **MENU** button five times to display the **Advance** setting menu.
- Press the **ENTER** button to highlight the **LCD L/R Scan** setting.
 - NB:** The *LCD L/R Scan will reverse the image displayed horizontally.*
- Press the **ENTER** button, the screen image will be reversed (Left to Right).
- Press the **ENTER** button again, the screen image will return to normal view.
- Press **UP** / **DOWN** button to highlight the **LCD U/D Scan** setting.
 - NB:** The *LCD U/D Scan will reverse the image displayed vertically.*
- Press the **ENTER** button, the screen image will be reversed (Top to Bottom).
- Press the **ENTER** button again, the screen image will return to normal view.
- Press **UP** / **DOWN** button to highlight the **Reset** option.
 - NB:** This option will return the monitor to the factory default settings.
- Press the **ENTER** button to re-start the monitor with the factory default settings.
- Press **UP** / **DOWN** button to highlight the **Version** setting.
- Press the **ENTER** button, the firmware version will be displayed on screen.
- Keep pressing the **MENU** button to cycle through the main menu options.
- Press the **SOURCE** button to exit the menu mode.

Calibrating Datavideo Monitors

Perhaps the most important way to make sure that your video really looks as good as it can on other monitors is to monitor the video during production with a properly calibrated monitor.

For guidance on how to calibrate a Datavideo Monitor using SMPTE colour bars please visit our website <http://www.datavideo.info/en/faq.php>

Specifications

Interface	<p>1x HD/SD-SDI input (SMPTE 272M-C 1.5Gbps, 270Mbps with Embedded Audio)</p> <p>1x Component Y.U.V Sony Betacam Spec</p> <p>1x CV input</p> <p>1x HDMI input</p> <p>1x D-Sub 15 Pin Plug (Tally Light Signal)</p>
HD/SD-SDI Spec	<p>SDI/HD-SDI Specifications</p> <p>Standard SMPTE 259M-C (270Mbps - 525/625 Component Video) and SMPTE 292M (1.485/1.001 Gbps)</p> <p>Connector BNC (IEC 169-8)</p> <p>Impedance 75 Ω</p> <p>Return Loss HD > 15 dB (5 MHz to 750 MHz) > 10 dB (750 MHz to 1.5 GHz)</p> <p>SD > 15 dB (5 MHz to 270 MHz)</p> <p>Equalization 200 m Belden 8281 cable at 270 Mbps; 100 m (typical) of Belden 1694A at 1.485 Gbps</p>
CV Spec	<p>Bandwidth: > 5.0MHz</p> <p>Differential of Gain (DG) < 3%</p> <p>Differential of Phase (DP) < 3°</p> <p>S/N: > 50 dB</p>
YUV Spec	<p>Bandwidth: > 5.2MHz</p> <p>Differential of Gain (DG) < 3%</p> <p>S/N: > 50 dB</p>
HDMI	Supports HDMI 1.1
Operating Temperature	0°C to 40°C (32°F to 102°F)
Humidity	10% to 90% (non condensing)
Firmware	SVN 1.6
Dimension & Weight	187mm (W) x 132mm (H) x 72mm (D) / 1.2Kgs
Power	DC 12V / 1.5A

Service & Support

It is our goal to make your products ownership a satisfying experience. Our supporting staff is available to assist you in setting up and operating your system. Please refer to our web site www.datavideo-tek.com for answers to common questions, support requests or contact your local office below.

Datavideo Global Website: www.datavideo-tek.com

Datavideo Corporation

Tel: +1 562 696 2324	Fax: +1 562-698-6930	E-Mail: contactus@datavideo.us
----------------------	----------------------	--

Datavideo Technologies Europe BV

Tel: +31-30-261-96-56	Fax: +31-30 261-96-57	E-Mail: service@datavideo.nl
-----------------------	-----------------------	--

Datavideo UK Limited

Tel: +44 1457 851 000	Fax: +44 1457 850 964	E-Mail: sales@datavideo.co.uk
-----------------------	-----------------------	--

Datavideo Technologies Co., Ltd

Tel: +886 2 8227 2888	Fax: +886-2-8227-2777	E-mail: service@datavideo.com.tw
-----------------------	-----------------------	--

Datavideo Technologies China Co., Ltd

Tel: +86 21-5603 6599	Fax: +86 21-5603 6770	E-mail: service@datavideo.cn
-----------------------	-----------------------	--

Datavideo Technologies (S) PTE LTD

Tel: +65-6749 6866	Fax: +65-6749 3266	E-mail: service@datavideo.sg
--------------------	--------------------	--

Datavideo HK Ltd

Tel: +852 2833 1981	Fax: +852-2833-9916	E-mail: info@datavideo.com.hk
---------------------	---------------------	--

All the trademarks are the properties of their respective owners.
Datavideo Technologies Co., Ltd. All rights reserved 2018

G082060476E2